



# Opticom Tech Video Server

## OPTICOM TECH S1

---

HOW TO ADD IP CAMERAS INTO VIDEO  
SERVER

Power Up Video Server and wait  
till boots up

---




# Log in (Default Log in Information Username: **root** Password: **root**)

---




# Select Settings

---

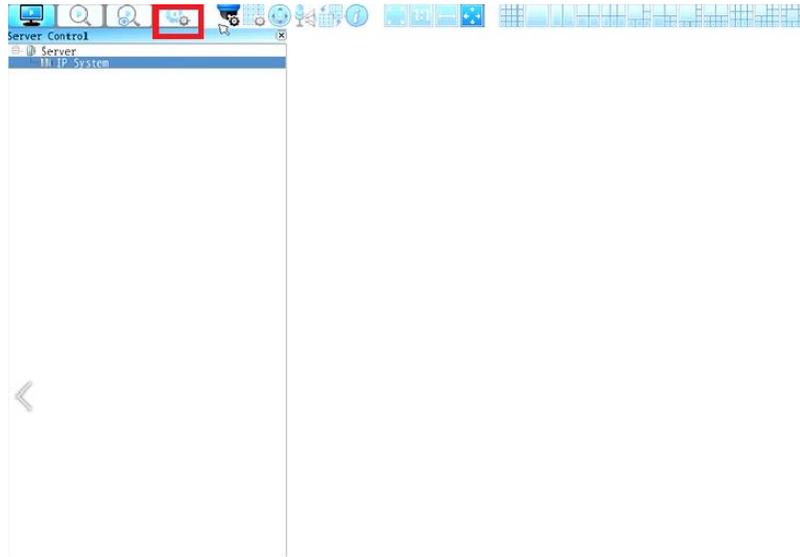


IP System


# Select: IP Device Configuration Simple Registration

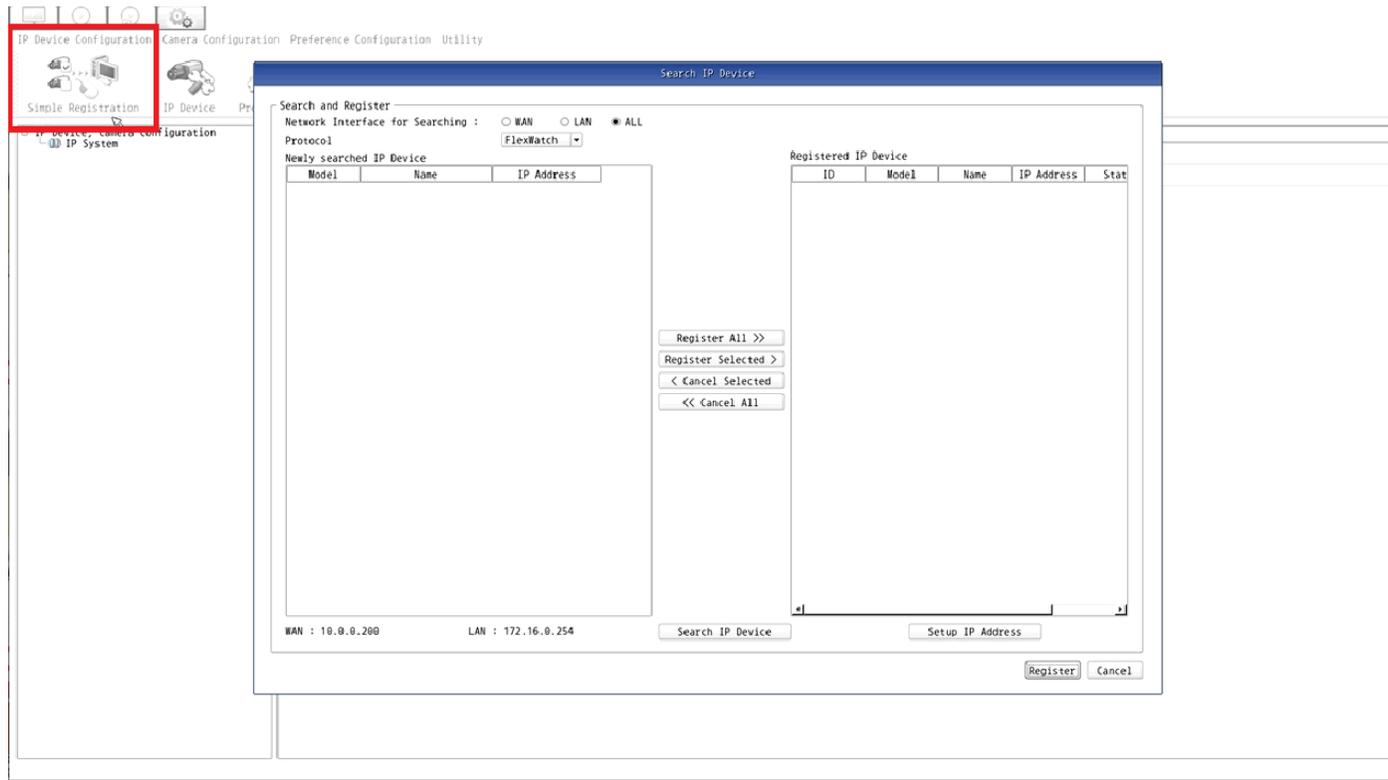


# Select: Search IP Device

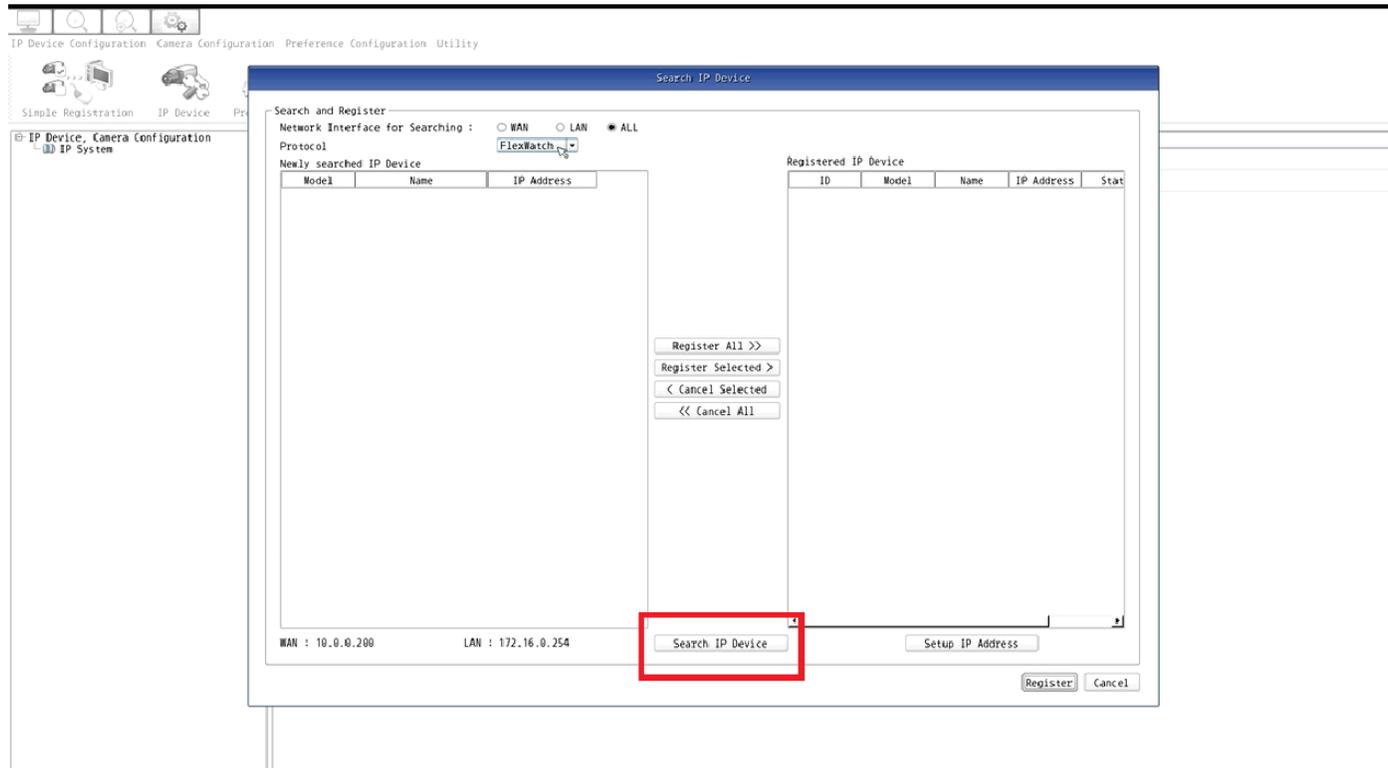


# All IP Cameras in the Network Should be detect

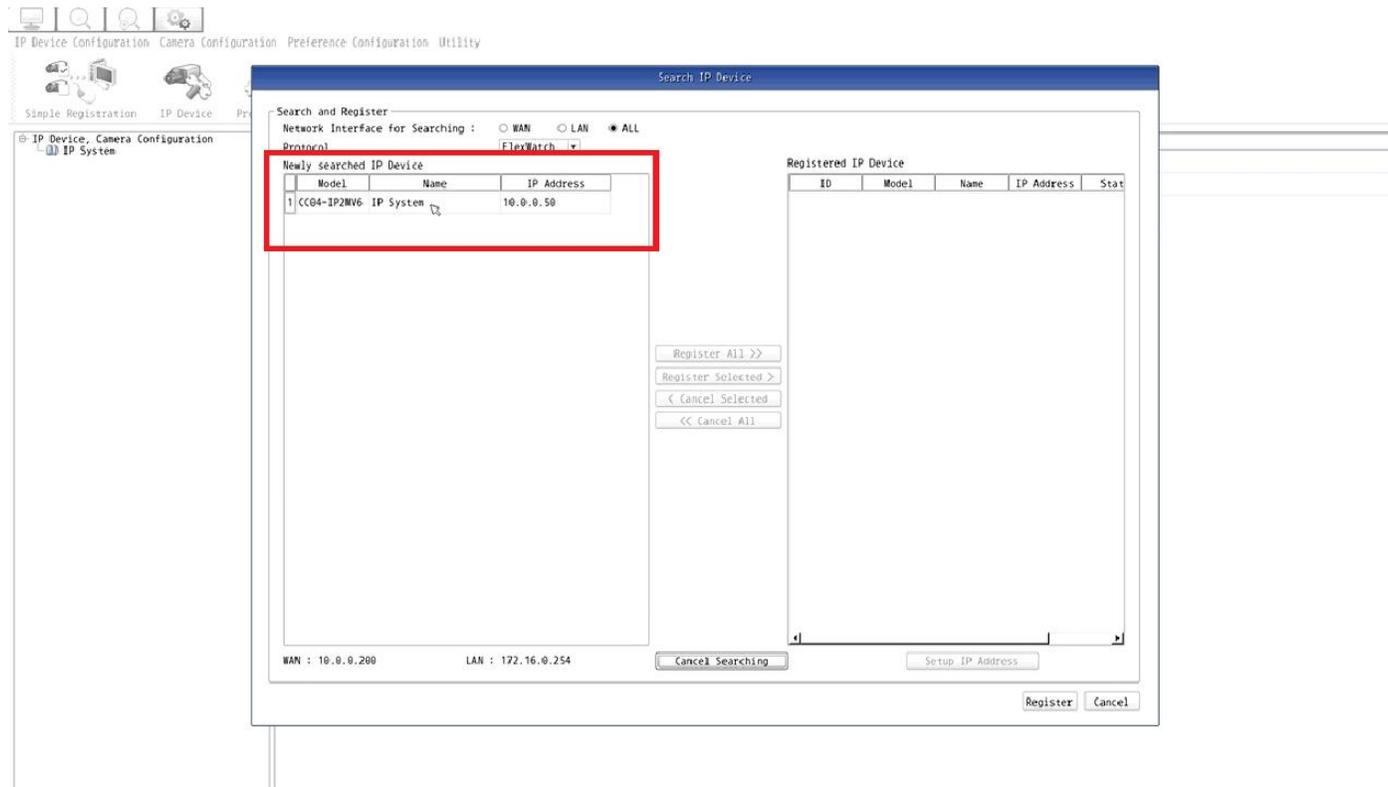

# Select: The IP Cameras & then The Register Option

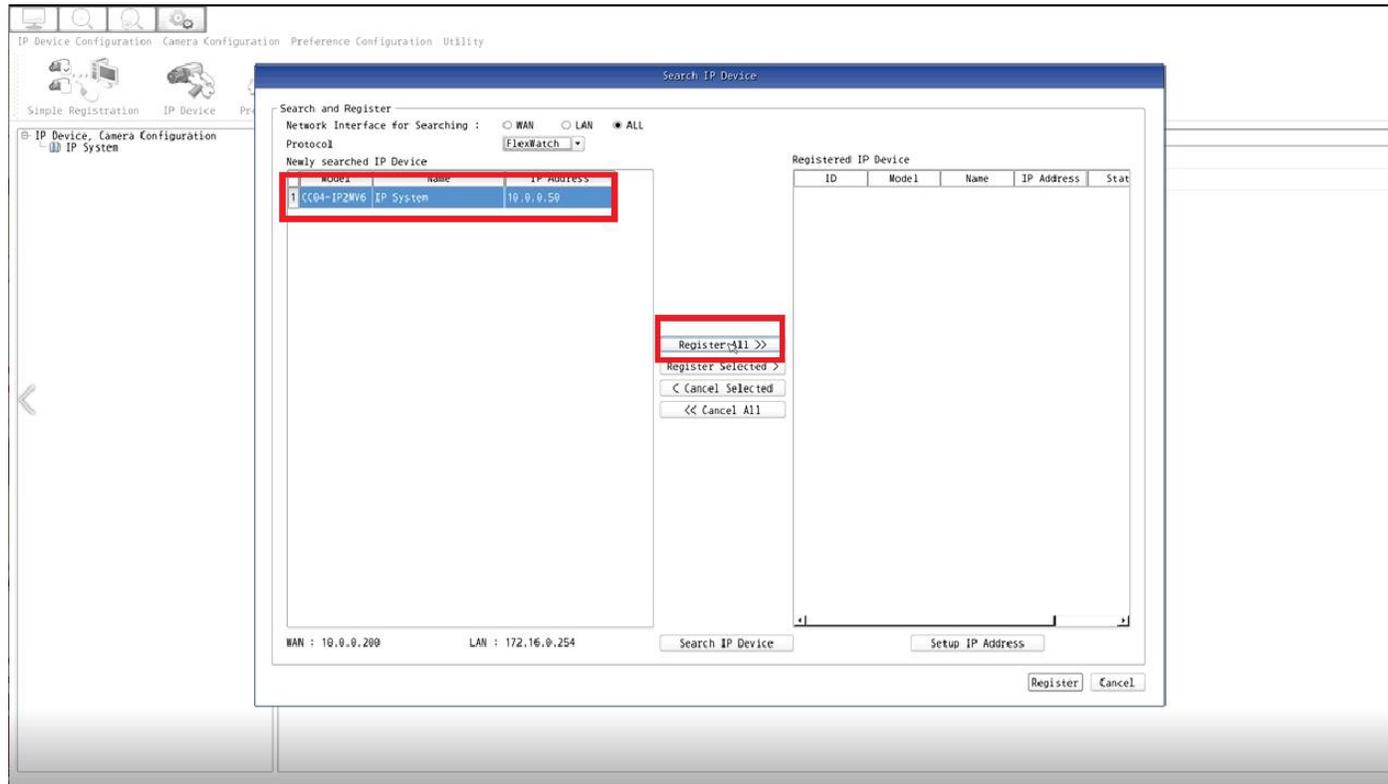


# Once it's on the (Registered IP Device) list. Select Register to finalize process


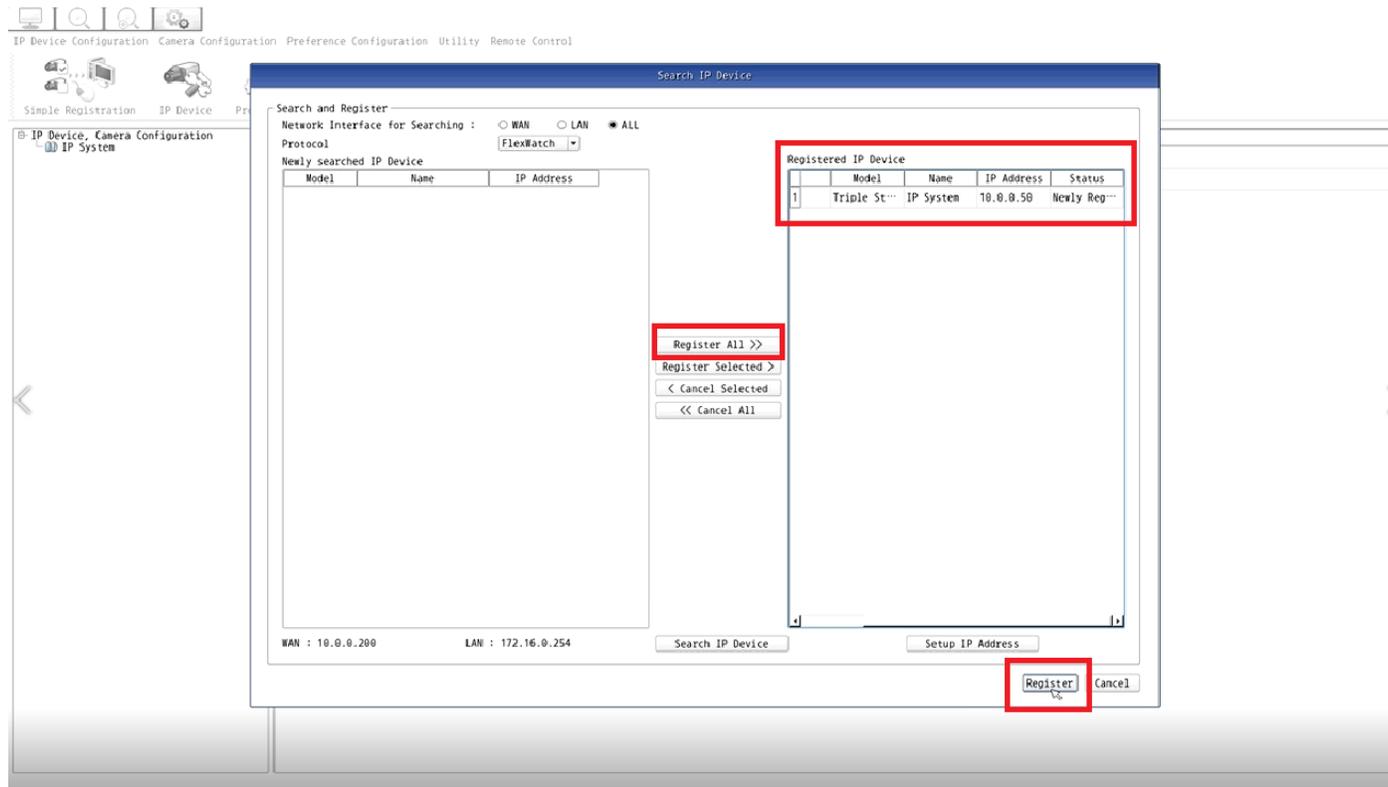


# Wait for process to complete

---

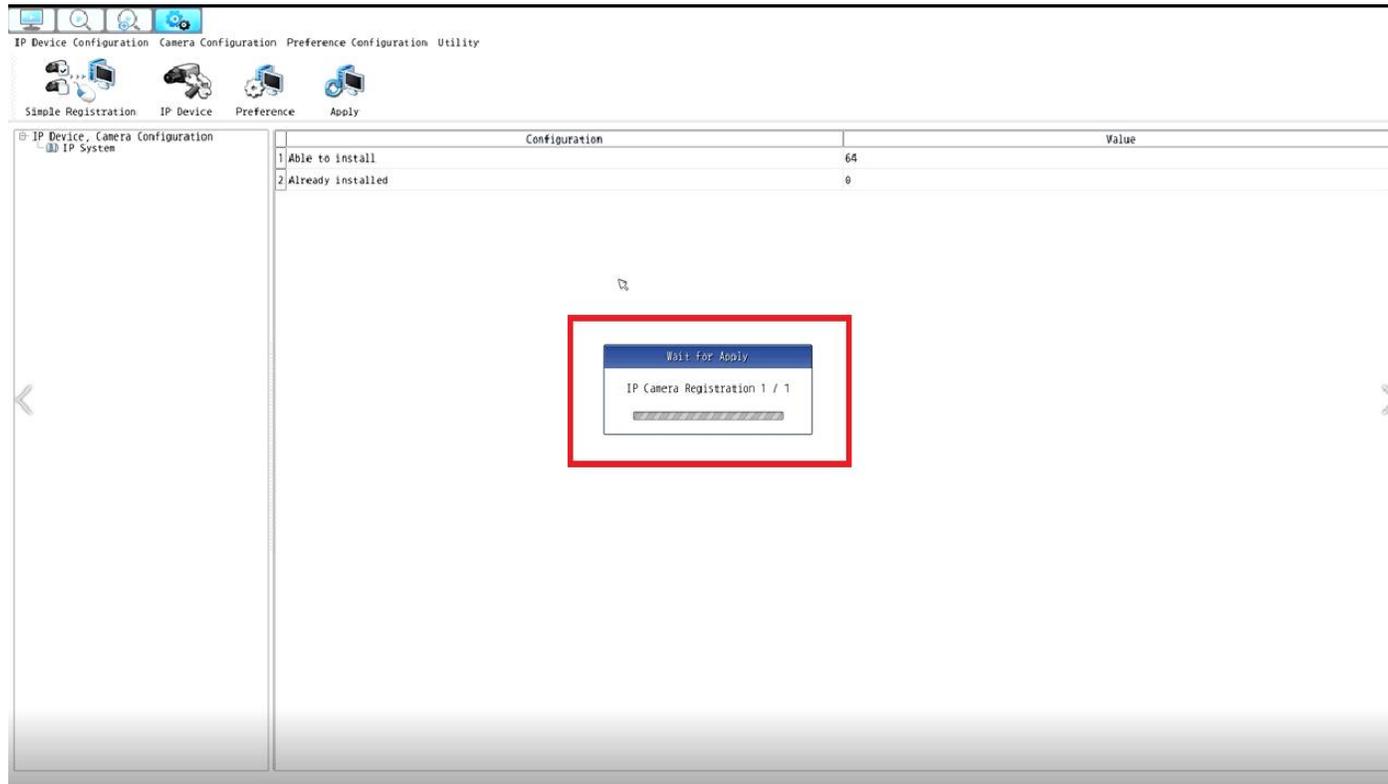

# Select: Apply to Finalize and save Setting

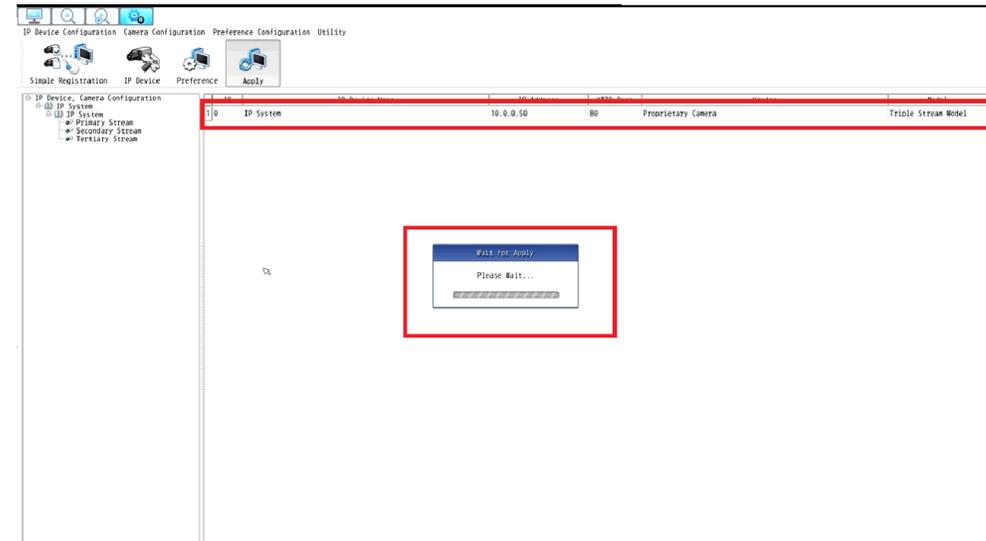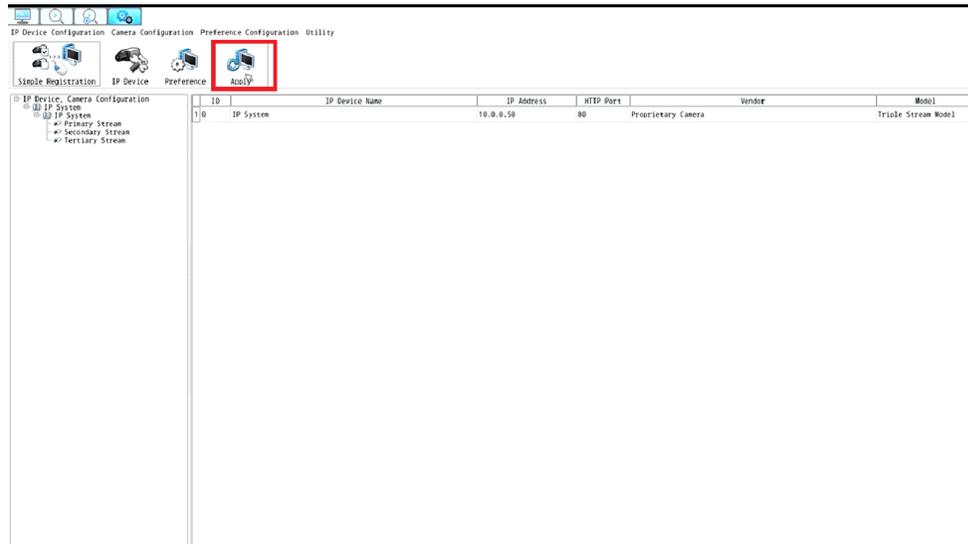


# Select: Live Display option, to view live stream

---





# Select type of grid layout

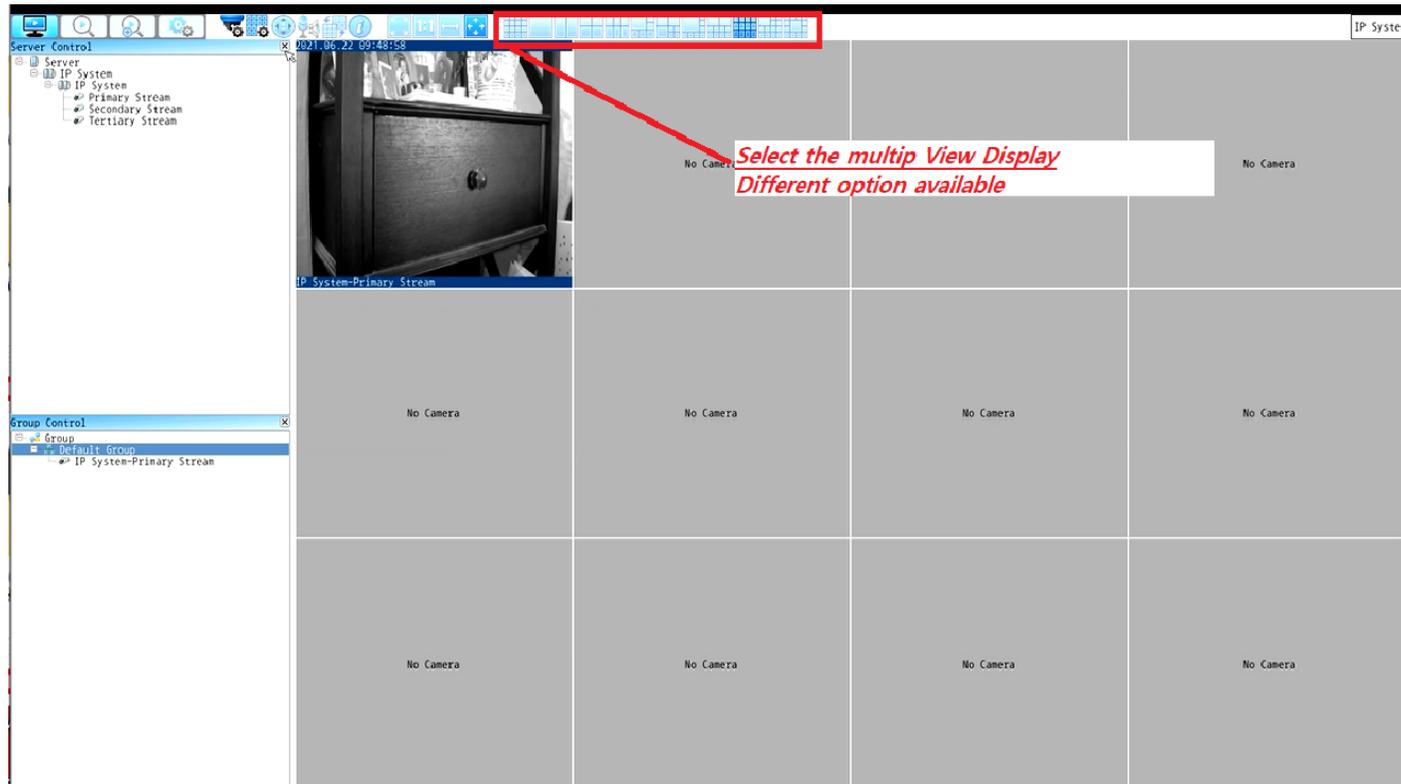

# Select: To view in Full Screen layout with out a submain displaying

---

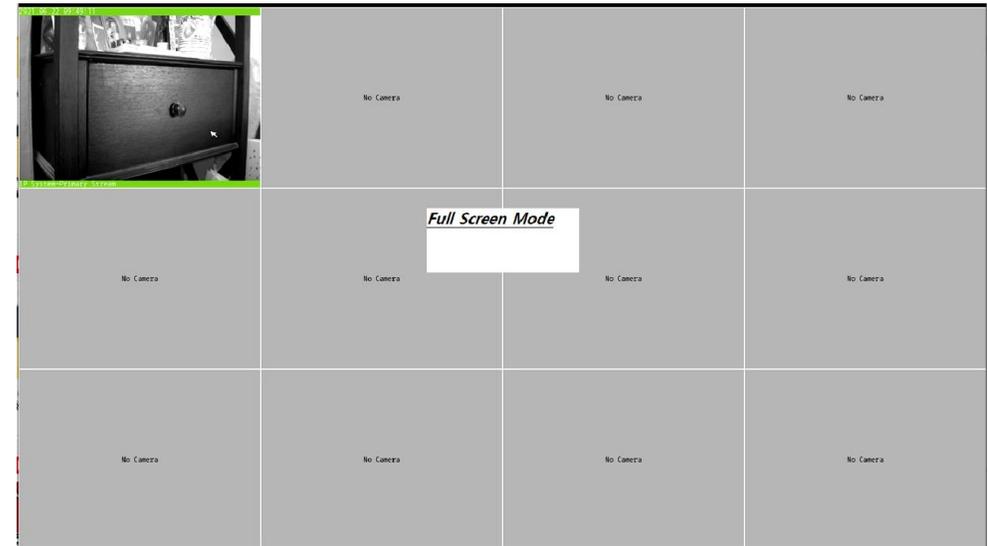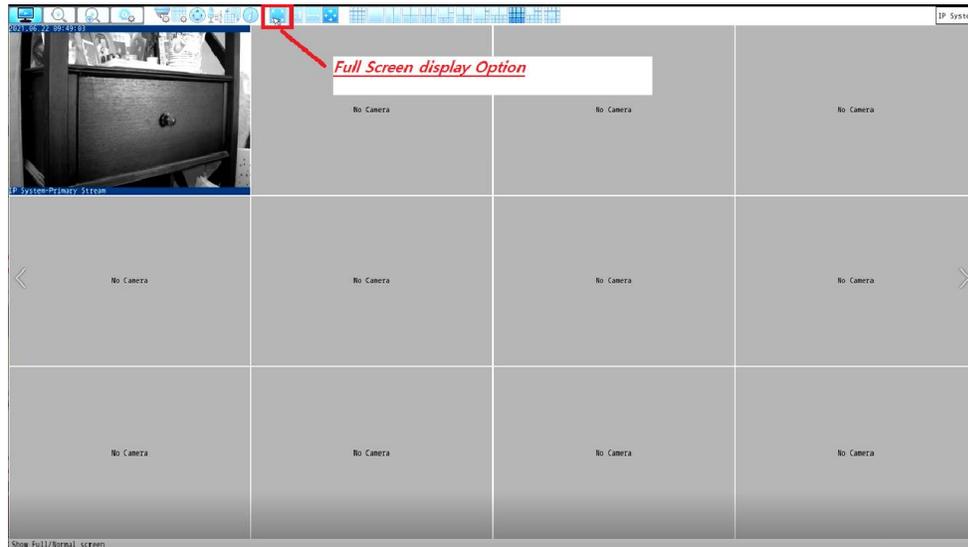

# Double Click on IP camera to view full screen or go back to multi view

---



# Video Server Model :

## OPTICOM\_TECH\_S1

---

